REMOTE CONTROL GUIDE

Coway BA-08

Your easy guide to every button and setting

Clean in two presses

Once your temperatures are set, this is all you need.

1 Wash

Press **Rear Cleansing** or **Front Cleansing**. Your chosen wash runs for one minute.

2 Dry

Press **Air Dryer** for warm air at your preferred temperature. Not dry yet? Press it again, or pat away any large drops with toilet paper.

Getting to know your remote

1 Stop
Stops all functions

2 Rear Cleansing
Rear wash – runs 1 minute

3 Wide
Narrow or wide fan spray

4 Air Dryer
Warm air dry – runs 2 minutes

5 Front Cleansing
Front wash – runs 1 minute

6 LCD Display
Shows your settings – see page 3

7 Water Pressure / Dryer Temp
Up / down arrows



8 Nozzle Position
Moves nozzle forward / back

9 Move
Nozzle sweeps for a better clean

10 Water Temp
Off + 3 heat settings

11 Seat Temp
Off + 3 heat settings

12 Air+
Gentler, aerated stream

13 Auto Cleansing
1 min wash + 2 min dry

14 Power
Leave on – sleeps automatically

Buttons explained

What each button does, grouped by how you'll use it

WASH & DRY



Rear Cleansing

Starts the rear (bottom) wash. Cleansing runs for 1 minute.



Front Cleansing

Starts the front (ladies) wash. Cleansing runs for 1 minute.



Air Dryer

Starts the warm air dryer, which runs for 2 minutes. Adjust the air temperature with the Water Pressure / Air Dryer Temp arrows while it's running.



Auto Cleansing

Runs a 1-minute rear wash followed by a 2-minute air dry, automatically.



Stop

Stops all functions immediately.

COMFORT SETTINGS



Water Temp

Cycles the water temperature through Off and 3 heat settings. Shown on screen as a thermometer.



Seat Temp

Cycles the seat temperature through Off and 3 heat settings. Shown on screen as a toilet seat.

ADJUST YOUR WASH



Wide

Changes the spray from a single narrow stream to a wider fan spray.



Water Pressure / Air Dryer Temp

Up increases water pressure, down decreases it – shown as bars on the left of the screen. While the dryer is running, the same arrows adjust the air temperature.



Air+

An extra pressure setting that adds air to the water stream for a gentler feel with more cleansing power. Shown as a fourth bar labelled Air+.



Nozzle Position

Up moves the nozzle forward, down moves it back. Its 5 positions are shown on the right of the screen.



Move

Press during a rear or front wash and the nozzle moves forwards and backwards for a more thorough clean.

POWER



Power

Rarely needed – please leave the remote on. When not in use it goes into sleep (power-saving) mode and the screen goes blank. Press any button to wake it.


Temperature levels

Applies to both water and seat temperature

▢▢▢	■▢▢	■■▢	■■■
Off Empty	**Mild** 1 bar	**Medium** 2 bars	**Warmest** 3 bars

Reading the screen

What the LCD display shows and the best settings for a thorough clean

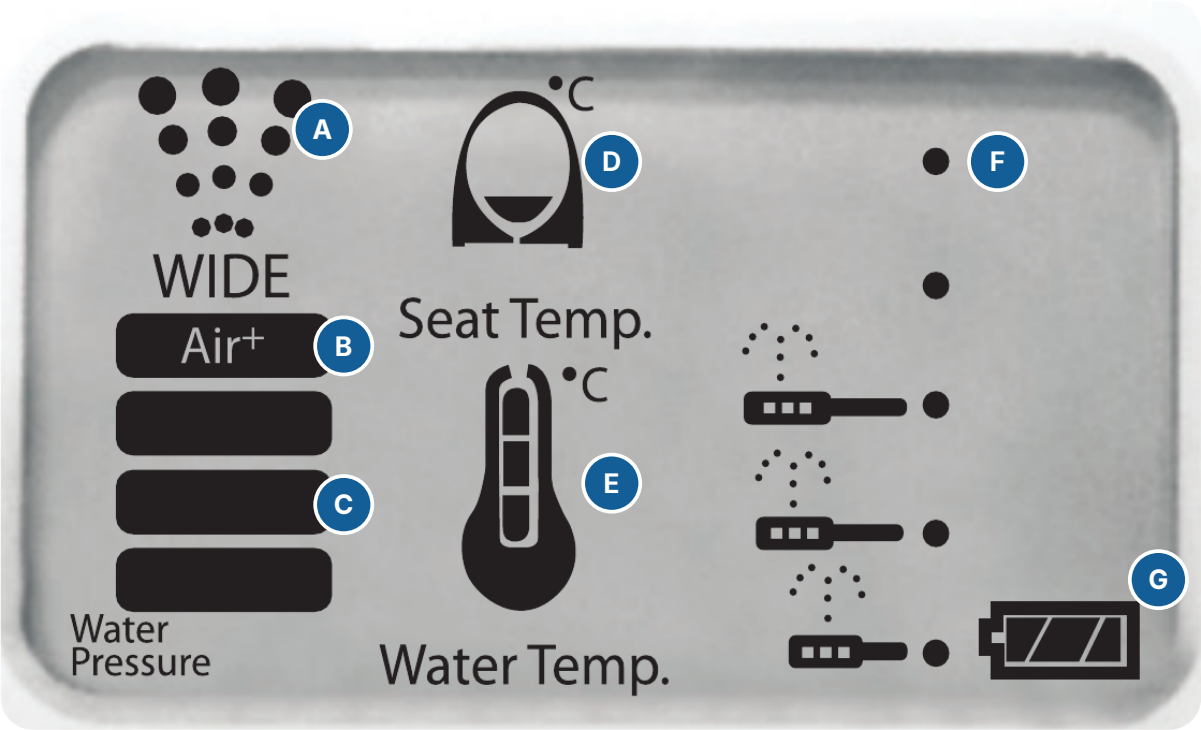

A **Spray width**
Shows the current spray pattern, from narrow to wide.

B **Air+**
Lit when the Air+ setting is switched on.

C **Water pressure / dryer temp**
Bars show the water pressure level, or the air temperature while the dryer runs.

D **Seat temperature**
Empty seat means off. Bars show the heat setting.

E **Water temperature**
Empty thermometer means off. Bars show the heat setting.

F **Nozzle position**
5 positions, set with the Nozzle Position arrows.

G **Battery**
Shows the remote's battery level.

Not getting a thorough clean?

Check the screen. For the most effective wash it should show:

- **Spray width** set to 1 or 3 sprays
- **Air+** indicator switched on
- **Water pressure** at 3 bars

Tip: press **Move** during your wash for a more thorough clean, and adjust **Nozzle Position** to suit.

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au