REMOTE CONTROL GUIDE

Coway BA-13B

Your easy guide to every button and setting

Simple to use

Four steps to a fresh, comfortable clean.

1 

Wash

Press **Rear** or **Front** to start your wash.

2 

Adjust

Adjust the **Nozzle Position** to suit, or roll your body forward so the spray reaches the right area.

3 

Dry

When you're done, press **Dry** to finish off.

4 

Repeat if needed

Not completely dry? Simply press **Dry** again.

Getting to know your remote

Rear 1
Rear (bottom) wash


Front 2
Front (ladies) wash

Stop 3
Stops all functions

Move 4
Nozzle sweeps for a wider clean

Dry 5
Warm air dryer

Water Pressure / Dry Temp 6
+ / – pressure or dryer heat

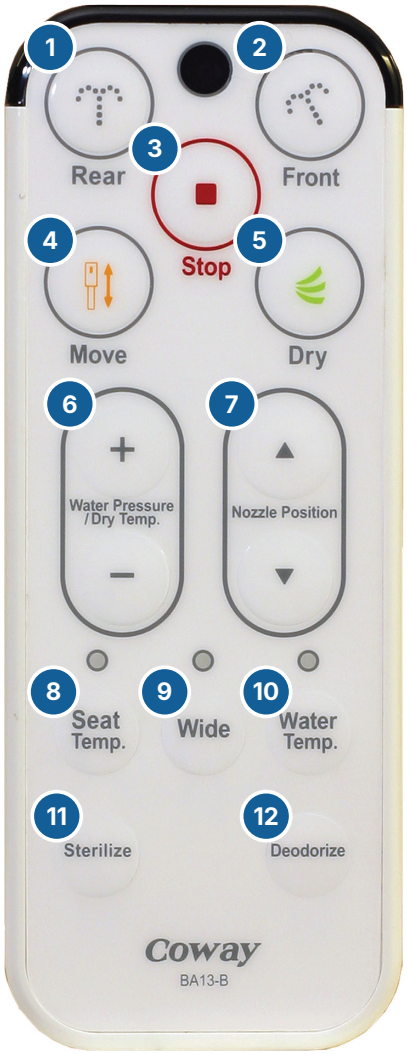

7 Nozzle Position
Moves nozzle forward / back

8 Seat Temp
4 settings with colour light

9 Wide
Narrow or wide fan spray

10 Water Temp
4 settings with colour light

11 Sterilize
30-second nozzle sterilise

12 Deodorize
Runs for about 1 minute

Buttons explained

What each button does, grouped by how you'll use it

WASH & DRY



Rear

Starts the rear (bottom) wash.



Front

Starts the front cleansing function for women.



Dry

Activates the warm air dryer.



Stop

Stops all currently operating functions.

COMFORT SETTINGS



Seat Temp

Sets the seat temperature in 4 levels. Each press cycles the indicator light: Low (blue) > Medium (pink) > High (red) > Off (no colour).



Water Temp

Sets the water temperature in 4 levels. Each press cycles the indicator light: Low (blue) > Medium (pink) > High (red) > Off (no colour).

ADJUST YOUR WASH



Move

Press during a rear or front wash and the nozzle moves forwards and backwards, so you can clean a wider area.



Water Pressure / Dry Temp

Adjusts water pressure in 3 levels (Low, Medium, High). While the dryer is running, it adjusts the air temperature in 4 levels (Low, Medium, High, Off).



Nozzle Position

Moves the nozzle forwards or backwards through 5 positions during a rear or front wash.



Wide

Changes the spray from a single narrow stream to a wider fan spray.

HYGIENE



Sterilize

Ejects sterilising water for 30 seconds to sterilise and clean the nozzle.



Deodorize

Runs the deodorising function for approximately 1 minute.

Temperature indicator lights

Applies to both Seat Temp and Water Temp

Low
Blue light

Medium
Pink light

High
Red light

Off
No colour

Need a hand?
Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au