REMOTE CONTROL GUIDE

Eco EB-R500

Your easy guide to every button and setting

Clean in two presses

Sit on the seat first. The bidet only works when the seat is occupied.

1 Wash

WASH BIDET

Press **WASH** (rear) or **BIDET** (front). Each runs for 1 minute. Add **MASSAGE** or **PULSE** during the wash.

2 Dry

DRY

Press **DRY** for 3 minutes of warm air. Use **+ / –** to adjust the air temperature.

Getting to know your remote

1 Wash
Rear wash – 1 minute

2 Nozzle position ▲ / ▼
Moves the nozzle forward / back

4 Bidet
Front (ladies) wash – 1 minute

7 Dry
Warm air dry – 3 minutes

8 Water Temp
Off + 3 heat settings

11 Seat Temp
Off + 3 heat settings

14 User presets 1 / 2
Recall your saved settings

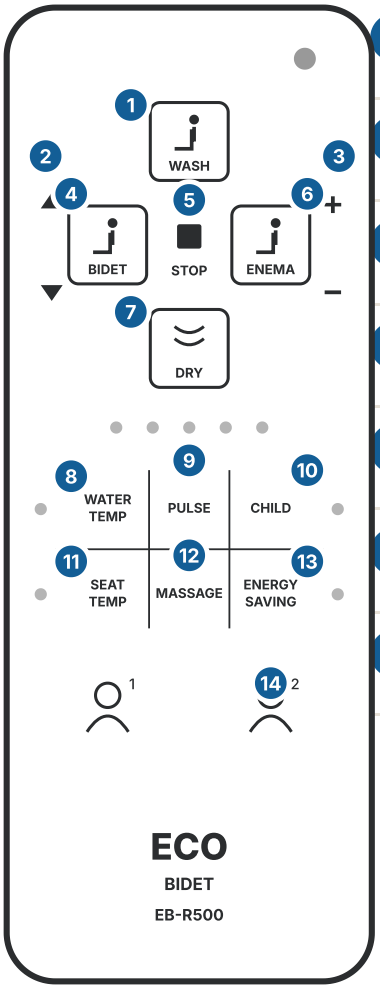

3 Pressure + / –
Water pressure, or dryer temp

5 Stop
Stops all functions

6 Enema
Enema wash – 2 minutes

9 Pulse
Pressure pulses strong to weak

10 Child
Gentler settings for children

12 Massage
Nozzle moves back and forth

13 Energy Saving
Automatic or learning mode

Buttons explained

What each button does, grouped by how you'll use it

WASH & DRY

WASH

WASH – rear wash

Runs for 1 minute.

BIDET

BIDET – front wash

A ladies wash for 1 minute.

ENEMA

ENEMA – enema wash

A specialised spray that helps relieve constipation, for 2 minutes. Massage doesn't work during enema.

CHILD

CHILD

Press first, then WASH or BIDET. Nozzle, pressure and temperatures are adjusted for children. Enema is disabled.

DRY

DRY

Warm air for 3 minutes, 5 temperature levels. Wiping lightly first improves drying.

■

STOP

Stops everything. Hold STOP on the side panel for 3 seconds to power off.

ADJUST YOUR WASH

+ / –

Pressure + / –

Water pressure (5 steps) during a wash, or dryer temperature while drying.

▲▼

Nozzle position

During a wash, moves the nozzle forward or back.

MAS-SAGE

MASSAGE

During WASH or BIDET, moves the nozzle back and forth for a wider wash.

PULSE

PULSE

During any wash, the pressure changes rhythmically from strong to weak.

COMFORT & CARE

SEAT TEMP

SEAT TEMP / WATER TEMP

Each cycles off → low → mid → high. The seat light turns red at 34°C or more, blue below.

ENERGY SAVING

ENERGY SAVING

Red light: automatic mode (seat kept at 32°C). Blue light: learning mode, which learns your usage over 5–7 days. Press until off to cancel.

Settings & tips

User presets, settings, side panel and getting a thorough clean

Settings

From the manual's user settings table

Save a user preset

Hold STOP + ▲ (user 1) or ▼ (user 2) for 3 secs

Set your nozzle position, pressure and temperatures first. Press the user button to recall them.

Night light

Hold + for 3 seconds

Turns the night light on or off. It's on by default.

Deodoriser fan speed

Hold STOP + ENERGY SAVING 3 secs, then + / −

Choose the fan speed when occupied and unoccupied. Leave the remote for 5 seconds to save.

Remote ID

Hold MASSAGE 3 secs, then + / − , then STOP

Only needed if several units are installed nearby (ID 0–3). Resets to 0 after changing batteries.

Side control panel



- **Nozzle cleaning:** hold WASH for 3 seconds (not seated). The nozzle moves forward; press STOP to retract it.
- **Power off:** hold STOP for 3 seconds. Press STOP, WASH or BIDET to turn it back on.
- **Initialise:** hold STOP for more than 5 seconds to reset all settings.
- **Child wash:** also available from the side control.

Not getting a thorough clean?

Try these for the most effective wash:

Adjust the nozzle
Use ▲ ▼ during your wash to find the right position.

Turn up the pressure
Press + for more pressure, up to 5 steps.

Add movement
Press MASSAGE or PULSE during your wash.

Batteries

When all the LEDs blink, replace all 4 AAA batteries at once. If the unit doesn't respond, unplug it for 3 seconds and plug it back in.

Filter

Replace the colloidal silver filter about every 6 months. It simply unscrews from the T-piece.

Need a hand?
Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au