REMOTE CONTROL GUIDE

InteliCare

Your easy guide to every button and setting

Clean in two presses

Sit on the seat first. The bidet only works when the seat is occupied.

1 Wash

WASH FRONT

Press **WASH** for a rear wash or **FRONT** for a feminine wash. Press it again during the wash for a massage action.

2 Dry

DRY

Press **DRY** for warm air drying. The dryer runs for 3 minutes, or press **STOP** to finish early.

Getting to know your remote

Level indicator 1
Shows the level of the setting you're adjusting

Decrease 2
Lowers the selected setting

TEMP 4
Water or dryer temperature

FRONT 6
Feminine wash

WASH 8
Rear wash

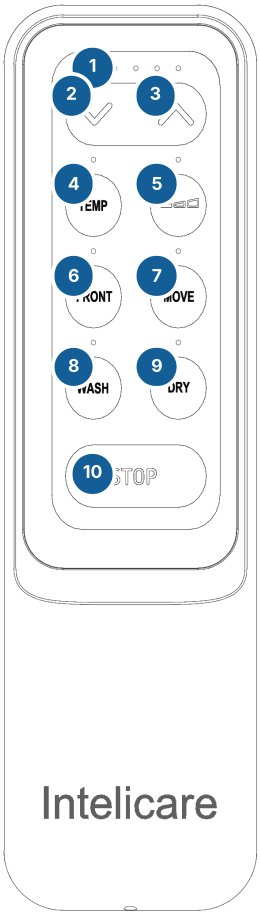

Increase 3
Raises the selected setting

Flow 5
Water flow, or dryer air volume

MOVE 7
Nozzle position

DRY 9
Warm air dryer – 3 minutes

STOP 10
Stops all functions. Also the Shift key for settings

Buttons explained

What each button does, grouped by how you'll use it

WASH & DRY



WASH – rear wash

Starts the rear (bottom) wash. It washes in a fixed position for about 10 seconds, then moves for about 18 seconds, then returns to the fixed position until the end. Press again during the wash for a massage action.



FRONT – feminine wash

Starts the front (ladies) wash, with the same fixed and moving pattern. Press again during the wash for a massage action.



DRY – warm air dryer

Starts the warm air dryer, which runs for 3 minutes. Use TEMP and Flow to adjust the air temperature and volume while it runs.



STOP

Stops any wash or dry immediately. Hold it down as the Shift key to change settings (see page 3).

ADJUST YOUR WASH



TEMP – temperature

During a wash, press TEMP then the arrows to set the water temperature. During drying, it sets the air temperature.



Flow – water flow / air volume

During a wash, press Flow then the arrows to set the water flow. During drying, it sets the air volume.



MOVE – nozzle position

During a rear or front wash, press MOVE then the arrows to move the nozzle forward or back to suit you.



Decrease / Increase

Lower or raise whichever setting you've selected. The level indicator lights show where it's set.

Settings at a glance

Defaults are shown filled in

SETTING	BUTTON	LEVELS	DEFAULT
Water temperature	TEMP	6 steps	●●●●○○ 4th
Water flow	Flow	5 steps	●●●○○ 3rd
Nozzle position	MOVE	5 steps	●●●○○ 3rd
Dryer temperature	TEMP (while drying)	6 steps	●●●○○○ 3rd
Dryer air volume	Flow (while drying)	5 steps	●●●○○ 3rd

Water temperature ranges from about 31°C to 39°C and dryer temperature from about 35°C to 50°C.

Settings & side control

Shortcuts, the side control knob and tips for a thorough clean

Shortcuts

Hold STOP (Shift), then press the second button

Night light mode

STOP + Flow

Switch the night light between its modes. In smart mode it turns on in the dark and off in bright light.

Sound on / off

STOP + MOVE

Turns the confirmation beeps on or off. Sound is on by default.

Water temperature mode

STOP + TEMP

Choose constant temperature (default, 3 min wash) or gradual cooling, where the water cools to the inlet temperature (1 min wash).

Manual nozzle cleaning

STOP + ∨ Decrease

When the bidet isn't in use, the nozzle extends and rinses. It returns after 5 minutes, or press STOP.

Side control knob



- **Twist** the knob to adjust the water pressure while you are washing.
- **Press** the knob to stop a wash or dry.
- With the lid and seat open and no one seated, twist clockwise to run a manual nozzle clean.
- Closing the lid puts the bidet into power standby.

Not getting a thorough clean?

Try these settings for the most effective wash:

Sit back fully
The seat sensor and nozzle work best when you're seated properly.

Adjust the nozzle
Press MOVE then the arrows to set the position that suits you.

Raise the flow
Press Flow then Increase for a stronger wash, or use the massage action.

Batteries

The remote uses 2 × 1.5V AAA (LR03) batteries. If the remote stops responding, replace the batteries first.

Remote not paired?

If the remote and bidet aren't matched, follow "One-on-One Setting" in the user manual, or give us a call.

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au