REMOTE CONTROL GUIDE

InteliWash

Your easy guide to every button and setting

Clean in one press

Sit on the seat first. The bidet only works when the seat is occupied.

1 Wash

WASH FRONT

Press **WASH** for a rear wash or **FRONT** for a ladies wash. The wash runs for 3 minutes, or press **STOP** to finish early.

2 Adjust

TEMP MOVE

During a wash, press **TEMP**, **Flow** or **MOVE**, then the arrows, to set it how you like.

Getting to know your remote

Level indicator 1
Shows the level of the setting

Decrease 2
Lowers the selected setting

TEMP 4
Water temperature

FRONT 6
Front (ladies) wash

WASH 8
Rear wash

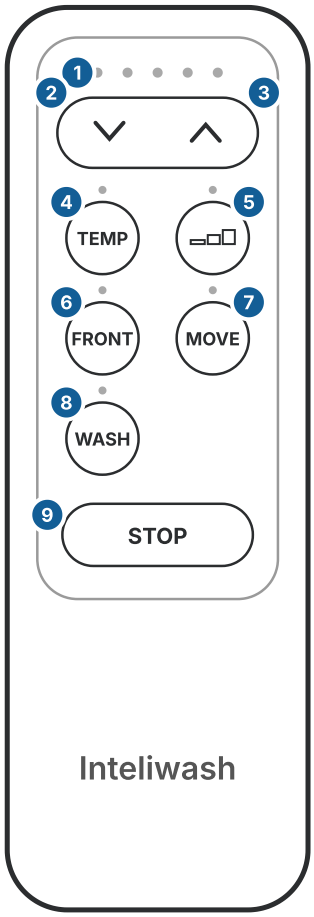

Increase 3
Raises the selected setting

Flow 5
Water flow strength

MOVE 7
Nozzle position

STOP 9
Stops all functions

Buttons explained

What each button does, grouped by how you'll use it

WASH

WASH – rear wash

Starts the rear wash for 3 minutes. It washes in a fixed position for about 10 seconds, moves back and forth for about 18 seconds, then returns to the fixed position until the end.

FRONT – ladies wash

Starts the front (ladies) wash for 3 minutes, with the same fixed and moving pattern.

STOP

Stops any wash immediately. Hold it as a shift key for massage modes and pairing (see page 3).

SIDE OF THE BIDET

Side buttons

Rear wash, ladies wash and Stop buttons on the side of the seat work without the remote. Hold Stop for 6 seconds for standby on / off.

ADJUST YOUR WASH

TEMP – water temperature

During a wash, press TEMP, then Increase or Decrease. 5 settings from about 31°C to 39°C.

Flow – water strength

During a wash, press Flow, then Increase or Decrease to change the strength of the water. 5 settings.

MOVE – nozzle position

During a wash, press MOVE, then Increase or Decrease to move the nozzle forward or back. 5 positions.

Decrease / Increase

Lower or raise whichever setting you've selected. The 5 indicator lights show the level.

Settings at a glance

Defaults are shown filled in

SETTING	BUTTON	LEVELS	DEFAULT
Water temperature	TEMP	5 steps	●●●○○ 3rd
Water flow	Flow	5 steps	●●●○○ 3rd
Nozzle position	MOVE	5 steps	●●●○○ 3rd

Settings & tips

Massage modes, night light, pairing and getting a thorough clean

Shortcuts

Hold the first button, then press the second

Massage modes

During a wash: hold **STOP** + press **FRONT**

Alternates between oscillating, pulsating, and oscillating + pulsating.

Night light mode

Hold **∧ Increase** + press **∨ Decrease**

1 light = off · 2 lights = always on (default) · 3 lights = smart (on in the dark, off in bright light).

Standby on / off

Hold **Stop** on the side of the bidet for 6 seconds

Puts the bidet into standby. Hold again for 6 seconds to turn it back on.

Pair the remote

Hold **STOP** + **TEMP** until the temp light blinks

Release, then press Stop on the side of the bidet, then Stop on the remote.

Side buttons



- **Rear wash** and **ladies wash** buttons start a wash without the remote.
- Press **Stop** (or any side button during a wash) to stop.
- The power light and night light sensor are on the same panel.
- Hold **Stop** for 6 seconds for standby.

Not getting a thorough clean?

Try these for the most effective wash:

Adjust the nozzle
Press MOVE then the arrows to find the right position.

Raise the flow
Press Flow then Increase for a stronger wash.

Add massage
Hold STOP and press FRONT during a wash.

Batteries

Uses 2 x AAA super alkaline batteries (Energizer or Duracell recommended). Don't use rechargeable or lithium. The level light flashes when they're low.

Self-clean after 72 hours

If it hasn't been used for 72 hours, it self-cleans for about 3 minutes when you sit down. Buttons work again after that.

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au