REMOTE CONTROL GUIDE

National N-2500 Air

Your easy guide to every button and setting

Clean in two presses

Sit on the seat first. The bidet only works when the seat is occupied.

1 Wash

Rear · Front

Press **Rear** or **Front**. Your wash runs for 2 minutes. Press it again to oscillate the nozzle.

2 Dry

Air Dryer

Press **Air Dryer** for 3 minutes of warm air. Use **+ / –** to adjust the air temperature.

Getting to know your remote

User presets 1 / 2 (1)
Hold 3 secs to save your settings

Nozzle position ▲ / ▼ (2)
Moves the nozzle forward / back

Rear (4)
Rear wash – 2 minutes

Front (6)
Front (ladies) wash – 2 minutes

Water Temp (9)
Off + 3 heat settings

Night Light (10)
7 colours, or off

Seat Temp (12)
Off + 3 heat settings

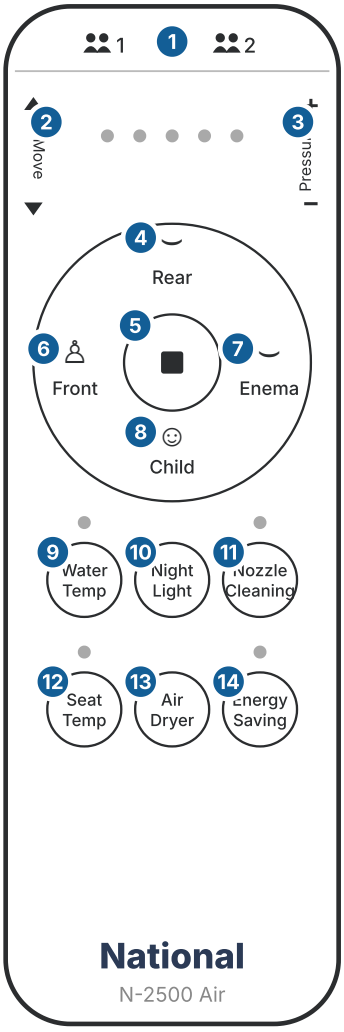

Pressure + / – (3)
Water pressure, or dryer temp

Stop (5)
Stops all functions

Enema (7)
Enema wash – 2 minutes

Child (8)
Automatic wash & dry cycle

Nozzle Cleaning (11)
Rinse, or hold 3 secs for a hot tip clean

Air Dryer (13)
Warm air dry – 3 minutes

Energy Saving (14)
2 saving modes · hold for sleep

Buttons explained

What each button does, grouped by how you'll use it

WASH & DRY



Rear

Starts the rear (bottom) wash for 2 minutes. Press again to oscillate the nozzle, and again to stop oscillating.



Front

Starts the front (ladies) wash for 2 minutes. Press again to oscillate the nozzle.



Enema

A soft but powerful wash for added cleansing benefit, for 2 minutes. Oscillation is not available for enema.



Child

An automatic wash for children and seniors: 20 seconds of rear wash, 40 seconds of oscillating rear wash, then 2 minutes of drying.



Air Dryer

Starts the warm air dryer for 3 minutes. Adjust the air temperature with + / – (5 levels).



Stop

Stops any wash or dry immediately.

ADJUST YOUR WASH



Pressure + / –

During a wash, adjusts water pressure (5 levels). During drying, adjusts the air temperature.



Nozzle position

During a wash, moves the nozzle forward or back. The 5 lights show the position, saved for next time.



Night Light

Turns the bowl night light on and changes its colour. It starts on white. Each press moves to the next colour, then off.

COMFORT & CARE



Water Temp / Seat Temp

Each cycles through off → low (green) → medium (yellow) → high (red). Settings are saved.



Nozzle Cleaning

When not seated: press to rinse the nozzle 3 times with cold water, or hold 3 secs for a 40-second hot-water tip clean. The nozzle then stays out for manual cleaning.



Energy Saving

Press once for mode 1 (green), again for mode 2 (red), again for off. Hold 3 secs for sleep mode.

Settings & tips

Temperatures, presets, side control and getting a thorough clean

Temperature levels

Water and seat temperature lights

SETTING	LIGHT	WATER	SEAT
Off	No light	Room temperature	Room temperature
Low	Green	34°C	34°C
Medium	Yellow	37°C	37°C
High	Red	40°C	40°C

Handy features

Save a user preset

Hold (1) or (2) for 3 seconds

Set up your water and seat temperature, pressure, nozzle position and dryer temperature first, then save. One beep confirms.

Sleep mode

Hold Energy Saving for 3 seconds

Puts the bidet to sleep whether or not someone is seated. Press Energy Saving again to wake it.

Night light colour

Press Night Light repeatedly

Cycles through 7 colours: white, sky blue, yellow, pink, red, sea blue, green, then off. It dims in energy saving mode 2.

Factory reset

Press ■ Stop 4 times within 2 seconds

Clears all settings back to factory defaults. Only works when no one is seated. A tone confirms.

Side control panel



- **Swipe toward the front** to start a front wash. Swipe again for oscillation.
- **Swipe toward the back** to start a rear wash.
- **Tap** anywhere on the panel briefly to stop.
- Enema isn't available from the side panel.

Not getting a thorough clean?

Try these for the most effective wash:

Adjust the nozzle
Use ▲ / ▼ during your wash to find the right position.

Turn up the pressure
Press + during your wash (5 levels).

Add movement
Press Rear or Front again to oscillate the nozzle.

Batteries

When all the lights on the remote blink, replace the AAA batteries. Don't mix old and new.

Remote not responding?

After new batteries, unplug the bidet, wait 3 seconds and plug it back in.

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au