CONTROL PANEL GUIDE

National N-800

Your easy guide to every button on the side panel

Clean in two presses

Sit on the seat first. The bidet only works when the seat is occupied.

1 Wash

Wash | Bidet

Press **Wash** (rear) or **Bidet** (front). Press it again for a back-and-forth massage.

2 Dry

Dry

Press **Dry** for 3 minutes of warm air. Use **+ / –** to adjust the air temperature.

Getting to know your control panel

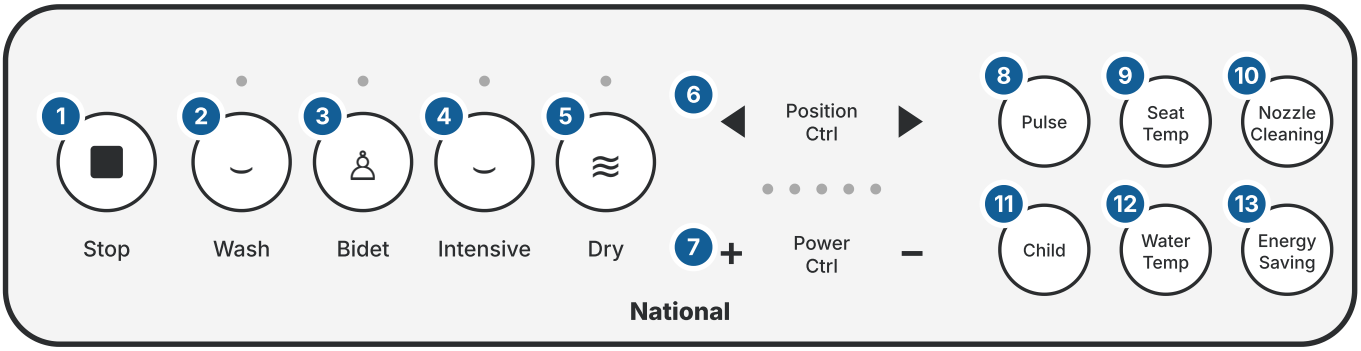

1. **Stop** — Stops all functions · hold 3 secs for sleep
2. **Wash** — Rear wash – 1 minute
3. **Bidet** — Front (feminine) wash – 1 minute
4. **Intensive** — Stronger wash for constipation – 1 minute
5. **Dry** — Warm air dryer – 3 minutes
6. **Position ◀ ▶** — Moves the nozzle (5 positions)
7. **Power + / –** — Water pressure, or dryer temperature
8. **Pulse** — Pressure repeats high and low
9. **Seat Temp** — Off / low / middle / high
10. **Nozzle Cleaning** — Manual nozzle clean · sitz bath
11. **Child** — Automatic wash & dry for children
12. **Water Temp** — Off / low / middle / high
13. **Energy Saving** — Automatic or powerful saving mode

Buttons explained

What each button does, grouped by how you'll use it

WASH & DRY

Wash

Wash – rear wash

Runs for 1 minute. Press again to move the nozzle back and forth for a wider wash; press once more to stop the massage.

Bidet

Bidet – front wash

A feminine wash for 1 minute, with the same massage option.

Inten-sive

Intensive

A specialised water spray that helps relieve constipation, for 1 minute.

Child

Child

Automatic cycle: 1 min bidet, 30 sec oscillating, 30 sec pulse, then 2 min dry, with gentler settings for children.

Dry

Dry

Warm air for 3 minutes. Wiping lightly first improves drying.

■

Stop

Stops everything. Hold 3 secs for sleep mode (press Stop, Wash, Bidet or Intensive to wake).

ADJUST YOUR WASH

+ / –

Power + / –

Water pressure (5 levels) during a wash, or dryer temperature (5 levels) while drying.

◀ ▶

Position

Moves the nozzle forward or back during a wash. 5 positions.

Pulse

Pulse

During a wash, the pressure repeats high and low for a smooth pulsating wash.

COMFORT & CARE

Seat Temp

Seat Temp / Water Temp

Each cycles through off → low → middle → high. The three lights above show the setting.

Nozzle Clean

Nozzle Cleaning

When not seated: the nozzle cleans itself 3 times, then extends for manual cleaning. Press Stop when done. During a wash: starts a 5-minute sitz bath.

Energy Saving

Energy Saving

Press until the yellow light shows for automatic (32°C), or green for powerful (heaters off). Press until the light goes off to cancel.

Settings & tips

Hidden settings, night light and getting a thorough clean

Settings

Most work when no one is seated · 1 beep = off, 2 beeps = on

SETTING	HOW	WHAT IT DOES	DEFAULT
Night light	Hold + for 3 seconds	Turns the blue LED night light on or off	On
Silent mode	Hold − for 3 seconds	Turns the chime sound on or off	Sound on
Sleep mode	Hold ■ Stop for 3 seconds	Puts the bidet to sleep. Wash, Bidet or Intensive wakes it	–
Factory reset	Hold ■ Stop for 5 seconds	Restarts and clears all settings	–
Seat sensor release	Hold Pulse for 3 seconds	Lets the bidet work without sitting (some features unavailable)	Off
Auto deodorising	Hold ■ Stop + Energy Saving 3 secs	Turns automatic deodorising on or off (works seated or not)	On
Auto tank draining	Hold ■ Stop + Water Temp 3 secs	Drains the tank after 48 hours without use	Off



- The panel is fixed to the **right-hand side** of the seat.
- Lights above Seat Temp and Water Temp show off / low / middle / high.
- The 5 lights in the middle show nozzle position and pressure levels.
- If the water temp lights blink in a pattern, it's a self-diagnosis code. Contact us.

Not getting a thorough clean?

Try these for the most effective wash:

Adjust the nozzle
Use ◀ ▶ during your wash to find the right position.

Turn up the pressure
Press + for more pressure, or try Intensive.

Add movement
Press Wash again for massage, or add Pulse.

Low water pressure?

Check the screen filter in the water inlet. Close the valve, disconnect the hose, clean the filter with a soft brush and refit.

Water or seat not warm?

Check the temperature isn't set to off or low, and that energy saving mode isn't on.

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au