REMOTE CONTROL GUIDE

Throne King

Your easy guide to every button on the flip-cover remote

Clean in two presses

Sit down first. Wash and dry only work when the seat is occupied.

1 Wash

Posterior · Feminine

Press **Posterior wash** or **Feminine wash**. Each runs for 1 minute. Press **Stop** to finish early.


2 Dry

Dry

Press **Dry** for 3 minutes of warm air. Stand up and the toilet flushes itself when auto flush is on.

Cover closed: everyday buttons


Flush and lid buttons are on the top edge

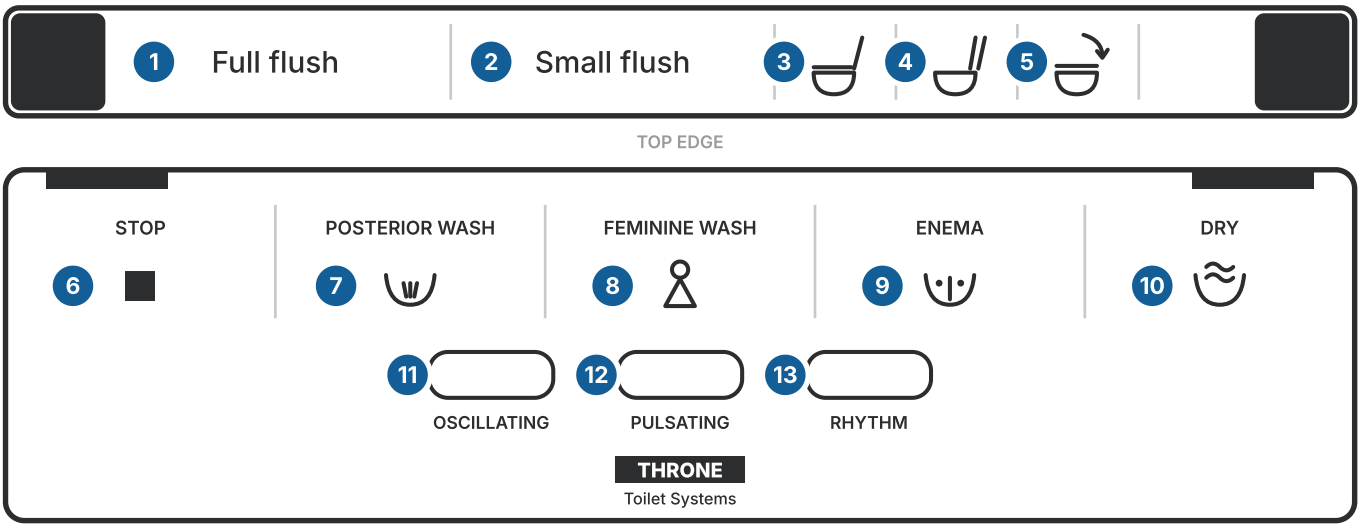

1. **Full flush** — Large flush, about 4.5 L
2. **Small flush** — Half flush, about 3 L
3. **Lid open** — Opens the lid only
4. **Seat & lid open** — Opens the seat and lid (for standing use)
5. **Close** — Closes the seat and lid softly
6. **Stop** — Stops any wash or dry
7. **Posterior wash** — Rear wash – 1 minute
8. **Feminine wash** — Front wash – 1 minute
9. **Enema** — Stream into the rectum to help pass a motion
10. **Dry** — Warm air dryer – 3 minutes
11. **Oscillating** — Nozzle moves back and forth
12. **Pulsating** — Spray pulses stronger and softer
13. **Rhythm** — Oscillating and pulsating together

Under the cover

Lift the front cover to reach the comfort and settings buttons

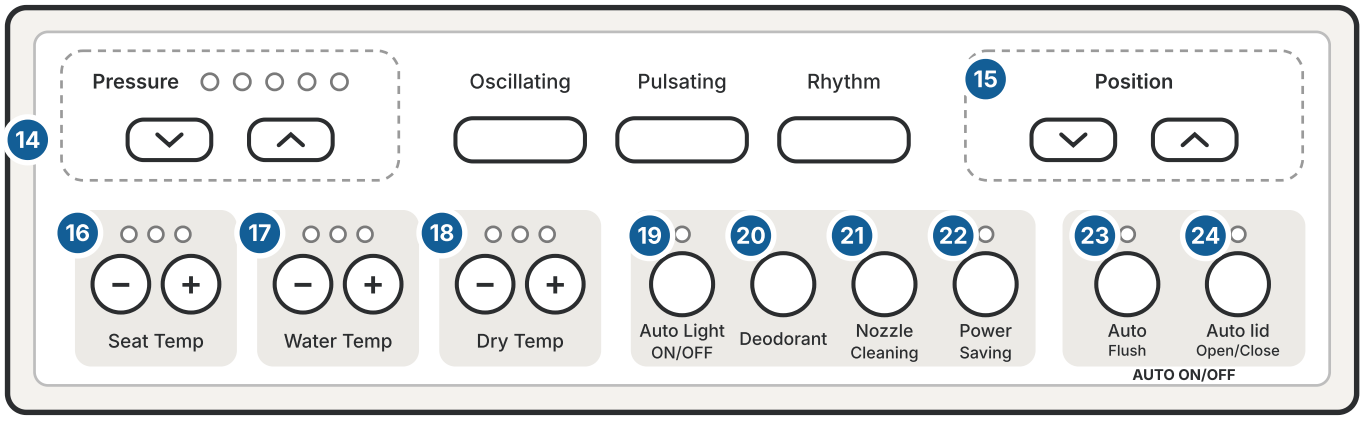

14 Pressure ▼ / ▲
5 water pressure levels, shown by the lights

15 Position ▼ / ▲
Moves the nozzle during a wash

16 Seat Temp – / +
Off, then 34 / 37 / 40 °C

17 Water Temp – / +
Off, then 34 / 38 / 40 °C

18 Dry Temp – / +
3 warm air levels

19 Auto Light
LED night light in the bowl, on / off

20 Deodorant
Automatic deodoriser, on / off

21 Nozzle Cleaning
Extends the nozzle for cleaning

22 Power Saving
Keeps water and seat at 30 °C

23 Auto Flush
Flushes when you stand up, on / off

24 Auto lid open/close
Lid opens as you approach, on / off

Oscillating / Pulsating / Rhythm
Same as buttons 11 – 13 on the front

ADJUST YOUR WASH

▼▲

Pressure

Press ▼ or ▲ to choose from 5 levels. Start low and work up to what feels right.

▼▲

Position

During a posterior or feminine wash, move the nozzle forward or back. It returns to the middle each time you use it.

Rhythm

Massage modes

Start a wash, then press Oscillating, Pulsating or Rhythm. Press the same button again to stop it.

COMFORT & CARE

– +

Temperatures

Seat, water and dry air each have 3 levels. The Seat and Water lamps on the main body light when they're on.

Power Saving

Power Saving

Water and seat stay at 30 °C. Using the toilet cancels it, and it returns when you stand up. Press again to cancel.

Deo-dorant

Deodorant

Turn it on and it runs automatically while you sit (up to 20 minutes), then for 1 minute after you stand.

Flushing, lid & tips

Two ways to flush, two ways to open the lid, and what to do when the power is out

Flushing

By remote: press **Full flush** (about 4.5 L) or **Small flush** (about 3 L) on the top edge.

Auto flush: turn on **Auto Flush** under the cover. Sit under 25 seconds for a small flush, over 25 seconds for a full flush, after you stand up.

First use: press a flush button once after installation to fill the bowl.


Opening & closing the lid



From left: **lid open**, **seat & lid open**, **close**. Or turn on **Auto lid open/close**: the lid opens when you stand in front of the toilet and closes when you walk away.

On the toilet itself

Use these if the remote isn't handy or the batteries are flat

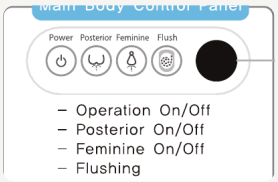

- The **main body control panel** on the side has Power, Posterior, Feminine and Flush.
- **Batteries flat?** Press **Flush** on this panel. Then fit 3 new AA batteries (not rechargeable).
- The **display panel** on top shows Power, Seat Sensor, Power Saving, Seat Temp and Water Temp.
- Turn off **Power** here before changing batteries or cleaning.

Power out?

Open the main body cover and press: **Bowl cleaning** 3 secs, then **Flush** 5 secs, then **Bowl cleaning** again for 3 secs.

Cleaning the nozzle

Without sitting, hold **Nozzle Cleaning** for 3 secs to extend the nozzle. Clean with a soft toothbrush, then press it again. The nozzle returns and cleans itself.

Not getting a thorough clean?

Sit towards the back of the seat, not on the edge, then try:

Adjust the nozzle
Use Position ▼ ▲ during your wash.

Turn up the pressure
Press Pressure ▲ for a stronger spray.

Add movement
Try Oscillating, Pulsating or Rhythm.

SETTING	LEVELS	NOTES
Water pressure	5 levels	Lights above Pressure show the level
Water temperature	Off · 34 · 38 · 40 °C	Water lamp on the main body shows it's on
Seat temperature	Off · 34 · 37 · 40 °C	Seat lamp on the main body shows it's on
Dry temperature	3 levels (40 – 59 °C)	Warm air runs for 3 minutes

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au