REMOTE CONTROL GUIDE

Throne Prince

Your easy guide to every button on the flip-cover remote

Clean in two presses

Sit down first. Wash and dry only work when the seat is occupied.

1 Wash — Posterior · Feminine


Press **Posterior wash** or **Feminine wash**. Each runs for 1 minute. Press **Stop** to finish early.

2 Dry — Dry

Press **Dry** for 3 minutes of warm air. Stand up and the toilet flushes itself when auto flush is on.

Cover closed: everyday buttons


Full and Small flush are on the top edge

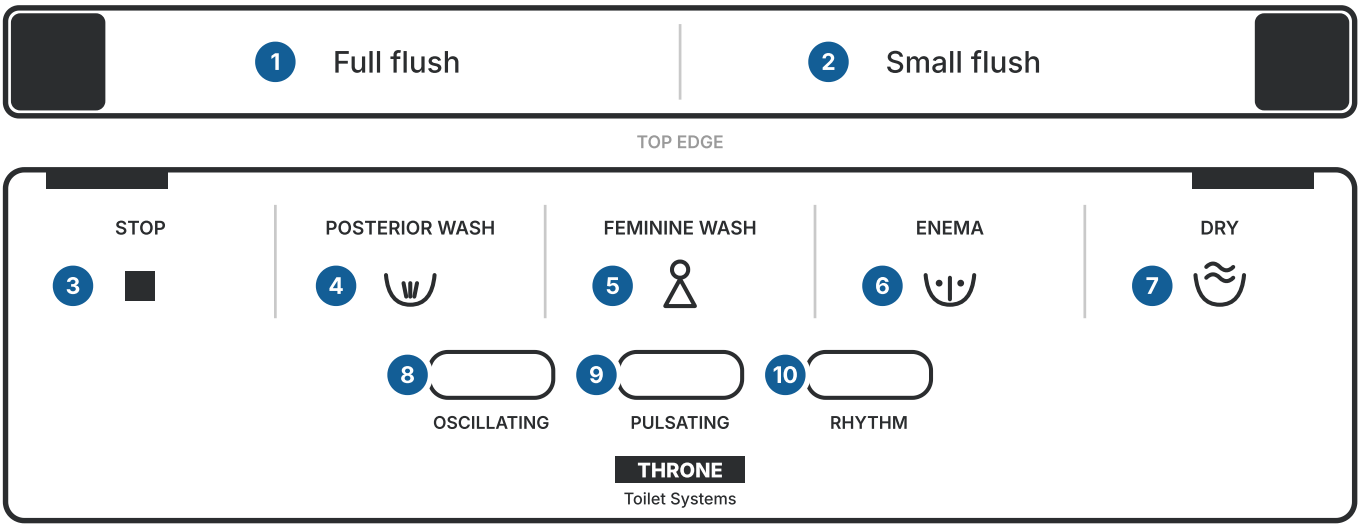

1. **Full flush** — Large flush, about 4.5 L
2. **Small flush** — Half flush, about 3 L
3. **Stop** — Stops any wash or dry
4. **Posterior wash** — Rear wash – 1 minute
5. **Feminine wash** — Front wash – 1 minute
6. **Enema** — Stream into the rectum to help pass a motion
7. **Dry** — Warm air dryer – 3 minutes
8. **Oscillating** — Nozzle moves back and forth
9. **Pulsating** — Spray pulses stronger and softer
10. **Rhythm** — Oscillating and pulsating together

Under the cover

Lift the front cover to reach the comfort and settings buttons

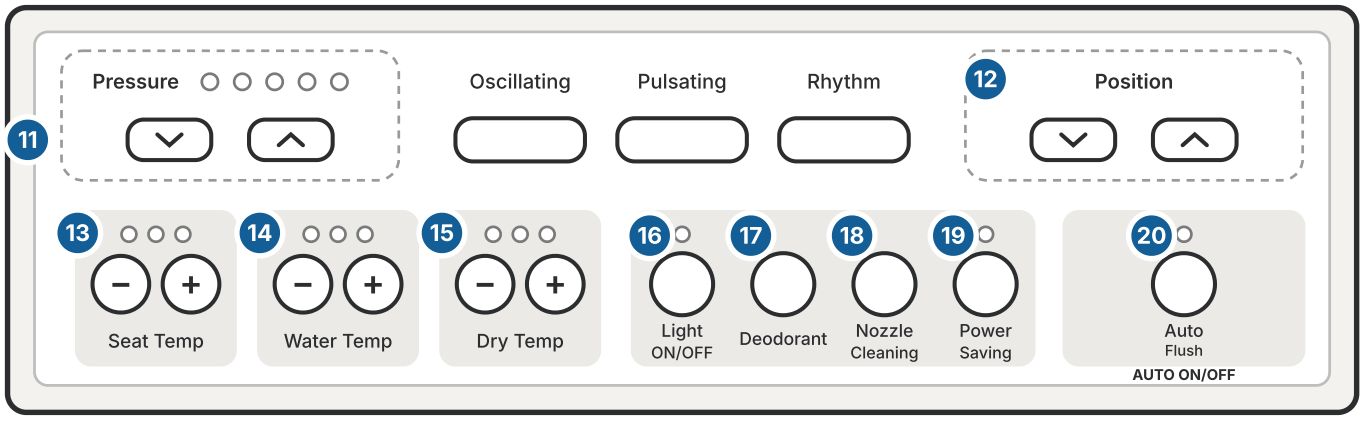

11 Pressure ▼ / ▲
5 water pressure levels, shown by the lights

12 Position ▼ / ▲
Moves the nozzle during a wash

13 Seat Temp – / +
Off, then 34 / 37 / 40 °C

14 Water Temp – / +
Off, then 34 / 38 / 40 °C

15 Dry Temp – / +
3 warm air levels

16 Light
LED night light in the bowl, on / off

17 Deodorant
Automatic deodoriser, on / off

18 Nozzle Cleaning
Extends the nozzle for cleaning

19 Power Saving
Keeps water and seat at 30 °C

20 Auto Flush
Flushes when you stand up, on / off

• Oscillating / Pulsating / Rhythm
Same as buttons 8 – 10 on the front

ADJUST YOUR WASH

Pressure
Press ▼ or ▲ to choose from 5 levels. Start low and work up to what feels right.

Position
During a posterior or feminine wash, move the nozzle forward or back. It returns to the middle each time you use it.

Massage modes
Start a wash, then press Oscillating, Pulsating or Rhythm. Press the same button again to stop it.

COMFORT & CARE

Temperatures
Seat, water and dry air each have 3 levels. The Seat and Water lamps on the main body light when they're on.

Power Saving
Water and seat stay at 30 °C. Using the toilet cancels it, and it returns when you stand up. Press again to cancel.

Deodorant
Turn it on and it runs automatically while you sit (up to 20 minutes), then for 1 minute after you stand.

Flushing, seat & tips

Two ways to flush, the soft close seat, and what to do when the power is out

Flushing

By remote: press **Full flush** (about 4.5 L) or **Small flush** (about 3 L) on the top edge.

Auto flush: turn on **Auto Flush** under the cover. Sit under 25 seconds for a small flush, over 25 seconds for a full flush, after you stand up.

First use: press a flush button once after installation to fill the bowl.

Soft close seat & lid


On the Prince, the seat and lid are lifted by hand. Hydraulic dampers in the hinges let them close down softly, with no slamming.

Lift the seat and lid together for standing use. Only the seat needs to be down, and occupied, for the wash and auto flush to work.

Want the lid to open by itself? The Throne King adds automatic lid open and close.

On the toilet itself

Use these if the remote isn't handy or the batteries are flat

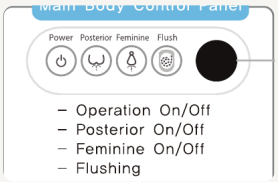

- The **main body control panel** on the side has Power, Posterior, Feminine and Flush.
- **Batteries flat?** Press **Flush** on this panel. Then fit 3 new AA batteries (not rechargeable).
- The **display panel** on top shows Power, Seat Sensor, Power Saving, Seat Temp and Water Temp.
- Turn off **Power** here before changing batteries or cleaning.

Power out?

Open the main body cover and press: **Bowl cleaning** 3 secs, then **Flush** 5 secs, then **Bowl cleaning** again for 3 secs.

Cleaning the nozzle

Without sitting, hold **Nozzle Cleaning** for 3 secs to extend the nozzle. Clean with a soft toothbrush, then press it again. The nozzle returns and cleans itself.

Not getting a thorough clean?

Sit towards the back of the seat, not on the edge, then try:

- **Adjust the nozzle** — Use Position ▼ ▲ during your wash.
- **Turn up the pressure** — Press Pressure ▲ for a stronger spray.
- **Add movement** — Try Oscillating, Pulsating or Rhythm.

SETTING	LEVELS	NOTES
Water pressure	5 levels	Lights above Pressure show the level
Water temperature	Off · 34 · 38 · 40 °C	Water lamp on the main body shows it's on
Seat temperature	Off · 34 · 37 · 40 °C	Seat lamp on the main body shows it's on
Dry temperature	3 levels (40 – 59 °C)	Warm air runs for 3 minutes

Need a hand?

Our Australian team can help with settings, troubleshooting and spare parts.

1300 243 387
sales@thebidetshop.com.au