INSTALLATION GUIDE

Coway BA-08

Electric bidet seat · Step-by-step installation

For use by licensed plumbers. Read all steps before starting.

Before you begin

01
Licensed plumber
Installation must comply with AS/NZS 3500.1.

02
Water off
Isolate the water supply at the wall tap before you start.

03
Power point
A 240V power point is required near the toilet.

04
Lay out all parts
Check every part below is present before starting.

What's in the box

The spare fitting supplied is not required for standard installs.



Water connection & mounting

Steps 1 – 6 · Connect the water supply and prepare the seat fixings



WATER CONNECTION

Isolate the water supply

Turn off the water supply at the wall tap. Remove the existing toilet seat and disconnect the existing flexible hose to the cistern.



WATER CONNECTION

Fit the backflow valve

Install the dual check backflow valve onto the water supply tap, using the green washer supplied.



WATER CONNECTION

Install the T-piece

Fit the T-piece to the backflow valve, then reconnect the flexible hose to the cistern.



WATER CONNECTION

Connect the white pipe

Push the white pipe firmly into the T-piece. This is a John Guest push-fit connection and must be fully inserted to seal.

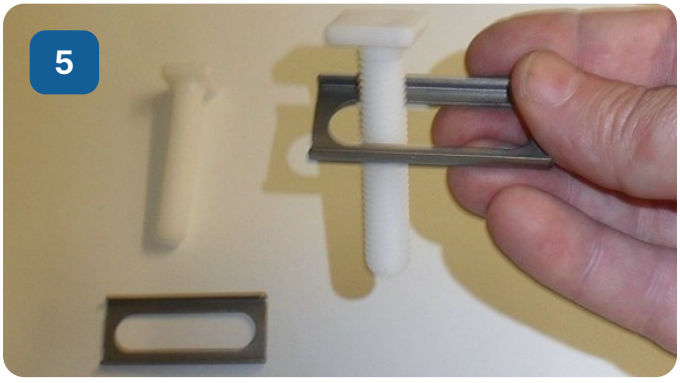

MOUNTING

Prepare the mounting bolts

Insert the white bolts into the metal slides.



MOUNTING

Fit the slides to the seat

Slide the metal slides into the wide tracks on the underside of the bidet.

Seat, filter & remote

Steps 7 – 12 · Fit the bidet, connect the filter and mount the remote



MOUNTING

Secure the bidet

Position the bidet on the toilet, then fit the nuts and tighten them with the supplied tube spanner.



FILTER & WATER INLET

Attach the filter holder

Insert the white pipe into the filter holder, then push the holder into the water inlet at the back of the bidet.

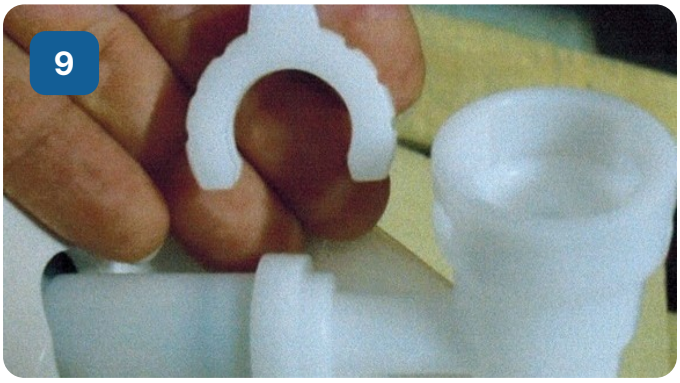

FILTER & WATER INLET

Fit the retaining clip

Push the clip over the raised collar where the filter holder joins the bidet to lock the connection.



FILTER & WATER INLET

Install the MF filter

Insert the MF filter into the filter holder and turn it clockwise until it locks into place.



REMOTE CONTROL

Fit the side remote holder

Attach the remote holder to either side of the bidet. Loosen the screw to adjust the angle of the bar.



REMOTE CONTROL

Remove the remote

Slide the remote control out of its holder to fit the batteries.

Finishing & reference

Steps 13 – 14 · Final check, troubleshooting and specifications



REMOTE CONTROL

Insert the batteries

Unscrew the battery cover on the back of the remote and insert the supplied batteries.

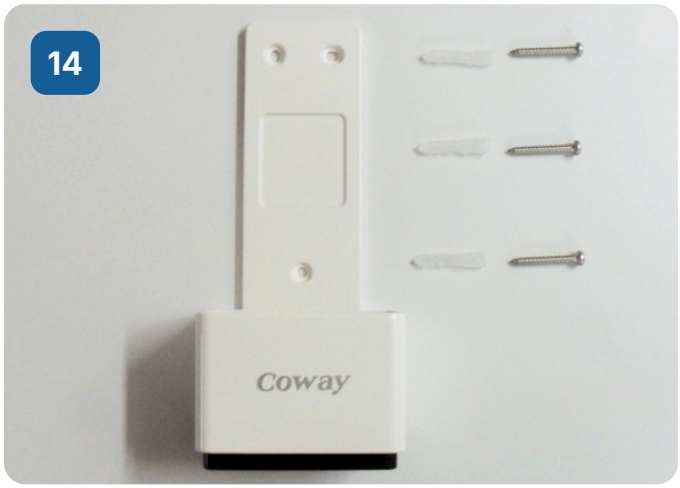

REMOTE CONTROL

Wall mount (optional)

Prefer the remote on the wall? Screw the wall holder in place using the plugs and screws supplied.

Final check

Turn the water supply back on, check every connection for leaks, then plug in and test the bidet.

Troubleshooting

Water leaks where the white pipe connects.

The pipe is not fully inserted. Push it firmly into the fitting until it seats.

The nozzle extends but no water comes out.

Check the lever on the T-piece is in the horizontal (open) position.

The bidet doesn't respond (remote has batteries).

The seat sensor must be activated — place a hand on the bottom-right of the seat.

Remote is pre-programmed. For adjustments, settings and spare parts, refer to the user manual.

Specifications

Model	BA08-AR / BA08-AE
Power rating	220–240V~ 50/60 Hz
Power consumption	850 W
Water pressure	110–680 kPa
Operating temp.	0°C – 40°C
Filter replacement	Every 4–6 months

Backflow & compliance

This douche seat is supplied with a backflow protection device complying with AS/NZS 3500.1. No further backflow prevention is required for connection to the water supply.

WaterMark WMTS-051:2016 · Lic 20094/1 · E5780

Need a hand?

Our Australian team is here to help with installation and spare parts.

1300 243 387

sales@thebidetshop.com.au